

Pendant kit option

For die cast exit signs

Installation Instructions

The following procedure describes how to install the pendant kit on a die cast exit sign.

1. Turn off AC power.
2. Secure the canopy backplate to the existing junction box using the junction box screws.
3. Feed AC input wires through the large hole in the center of the canopy backplate.
4. Thread the 3/8" IPS swivel nut onto the stem (see fig. 1) until even with top of stem.
5. Feed AC wires through the stem.
6. Slide the swivel/stem assembly into the canopy backplate (see fig. 2).
7. Slide the canopy over the backplate and twist the canopy onto the studs of the canopy backplate.
8. Slide the bracket cover onto the stem (see fig. 2).
9. Thread a 5/8" nut onto the end of the stem.
10. Slide the bracket onto the stem, and position the bracket as desired and use the 5/8" lock washer and the other 5/8" nut to secure to the stem.
11. Mount one side of the die cast exit sign to the bracket using the screws from the die cast exit (see fig. 2). Put the front cover back on the unit as described in the exit sign mounting instructions.
12. Energize AC power.

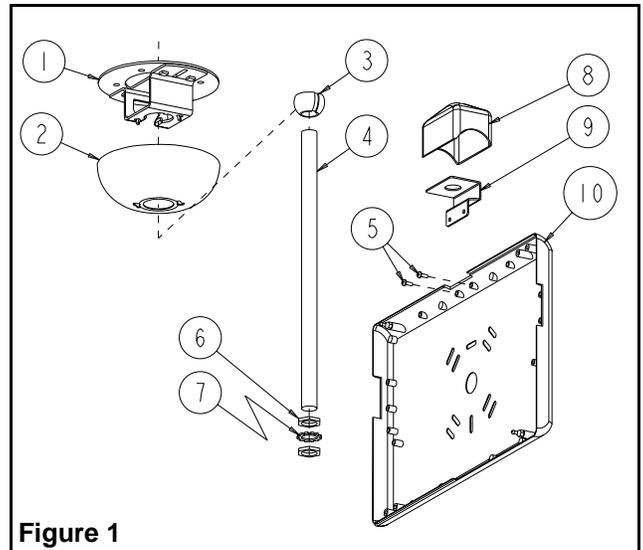


Figure 1

Part List

- | | |
|---|----------------------------------|
| 1. Canopy backplate | 6. 5/8" nut (2 supplied) |
| 2. Canopy | 7. Lock washer |
| 3. 3/8" IPS swivel nut | 8. Bracket cover |
| 4. Stem | 9. Bracket |
| 5. Screws from the Die cast unit (2 not supplied) | 10. Die cast unit (not supplied) |

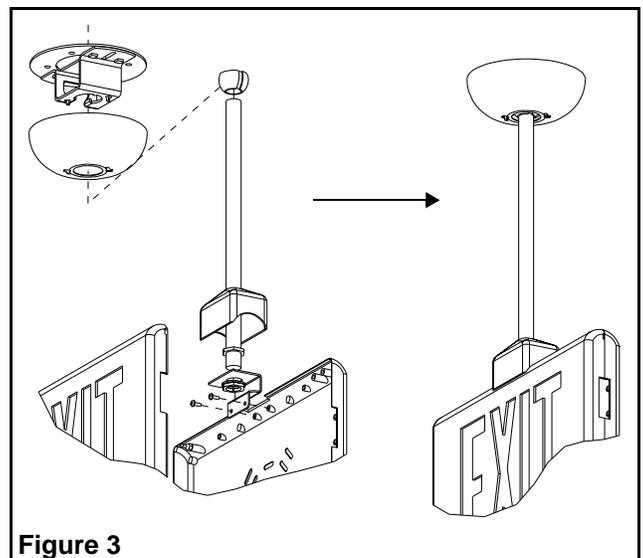


Figure 3

Pendant kit option

For plastic exit signs

Installation Instructions

The following procedure describes how to install the pendant kit on a exit sign.

1. Turn off AC power.
2. Secure the canopy backplate to the existing junction box using the junction box screws.
3. Feed AC input wires through the large hole in the center of the canopy backplate.
4. Thread the 3/8" IPS swivel nut onto the stem (see fig. 1) until even with top of stem.
5. Feed AC wires through the stem.
6. Slide the swivel/stem assembly into the canopy backplate (see fig. 2).
7. Slide the canopy over the backplate and twist the canopy onto the studs of the canopy backplate.
8. Thread a 3/8" IPS pal nut onto the stem approximately 1/2" from the end.
9. Slide one washer onto the stem, slide the junction box onto the stem. Slide the other washer onto the stem and secure with the 3/8" IPS pal nut to the stem flush to the end.
10. Use first pal nut to tighten the assembly
11. Attach the spider plate to electrical box with the junction box screws
12. Snap the unit canopy to the plastic unit and follow unit installation instructions.
13. Hook the unit canopy to the spider plate and secure the connection with the unit canopy screw.
14. Put the front cover back on the unit as described in the exit sign mounting instructions.
15. Energize AC power.

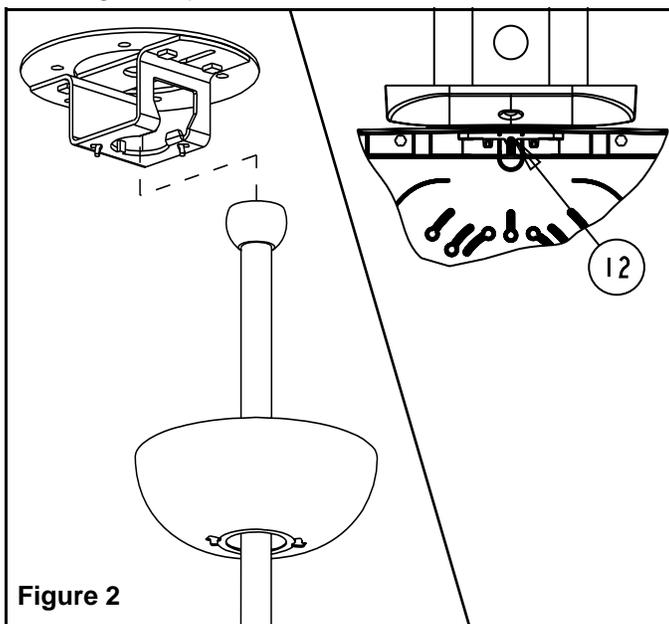


Figure 2

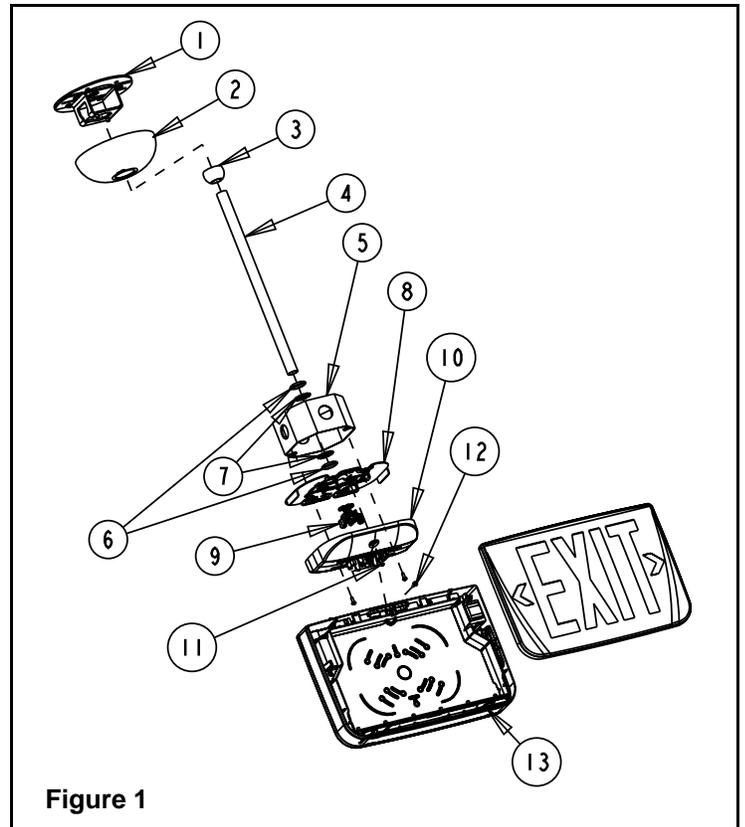


Figure 1

Part List

- | | |
|--------------------------------|---------------------------------|
| 1. Canopy backplate | 8. Spider plate |
| 2. Canopy (metal) | 9. Canopy lock |
| 3. 3/8"IPS swivel nut | 10. Unit canopy (plastic) |
| 4. Stem | 11. Screw from the Plastic unit |
| 5. Junction box (not supplied) | 12. Canopy screw |
| 6. 3/8" pal nut (2 supplied) | 13. Plastic unit (not supplied) |
| 7. Washer (2 supplied) | |

Pendant kit option

For exit signs

Installation Instructions

The following procedure describes how to install the pendant kit on an exit sign.

1. Turn off AC power.
2. Secure the canopy backplate to the existing junction box using the junction box screws.
3. Feed AC input wires through the large hole in the center of the canopy backplate.
4. Thread the 3/8" IPS swivel nut onto the stem (see fig. 1) until even with top of stem.
5. Feed AC wires through the stem.
6. Slide the swivel/stem assembly into the canopy backplate (see fig. 2).
7. Slide the canopy over the backplate and twist the canopy onto the studs of the canopy backplate.
8. Thread a 5/8" nut onto the end of the stem.
9. Guide the stem into the hole in the exit or emergency light housing.
10. Position the exit or light housing as desired and use the 5/8" lockwasher and the other 5/8" nut to secure to the stem.
11. Energize AC power.
12. Follow the exit sign mounting instructions for unit installation.

Note — On steel exit signs, the attachment is made to the center knock-out of canopy backplate.

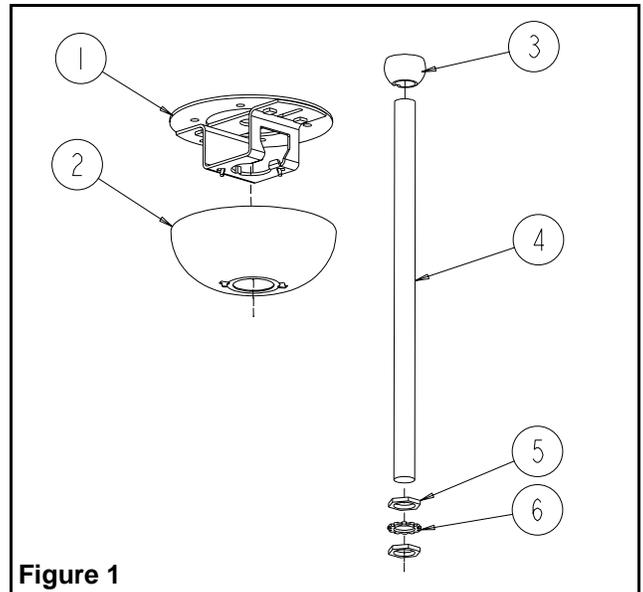


Figure 1

Part List

- | | |
|-----------------------|--------------------------|
| 1. Canopy backplate | 4. Stem |
| 2. Canopy | 5. 5/8" nut (2 supplied) |
| 3. 3/8"IPS swivel nut | 6. Lockwasher |

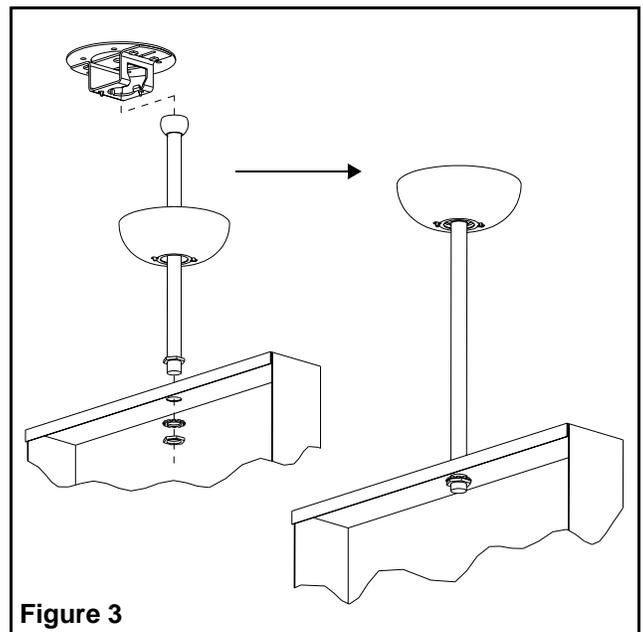


Figure 3